


DING-A-LING

FLYING SAUCER INSTRUCTION SHEET

DO NOT THROW THIS SHEET AWAY. READ ALL INSTRUCTIONS CAREFULLY.


HOW TO PLAY WITH YOUR FLYING SAUCER

1

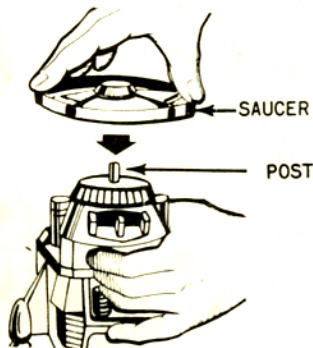


PUT SAUCER ON POST ON FLYING SAUCER'S HEAD, AS SHOWN.

2

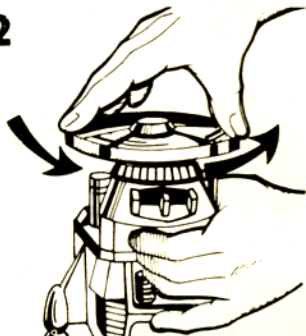

TO WIND SAUCER, TURN IT SEVERAL TIMES TO THE LEFT, AS SHOWN.
CAUTION: DO NOT OVERWIND.

3

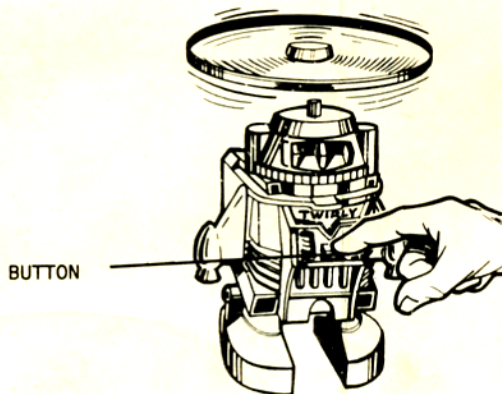

PRESS THE BUTTON IN FLYING SAUCER'S CHEST AND THE SAUCER WILL FLY OFF HIS HEAD.



©1971 TOPPER CORPORATION, ELIZABETH, N.J. 07206

3026-0010

PRINTED IN HONG KONG